



RUST BUSTER

RB7018L & RB7018R Front Bed Mount 2009-2014 Ford F-150



REQUIRED TOOLS

Jack Stands or Lift
Mig Welder
Paint/Primer
Hand Grinder
Cutting Wheel or Torch
Welding Gloves
Welding Hood/Shield
Ear & Eye Protection
Sockets & Ratchet
Fire Extinguisher
Hammer
C-Clamps
Tape Measure

KIT CONTAINS

Front Bed Mount

QTY

1



RUST BUSTER

RB7018L & RB7018R Front Bed Mount 2009-2014 Ford F-150

1) PREPARING YOUR VEHICLE

Begin by disconnecting your battery prior to starting your installation.

Inspect your vehicle for leaking fuel lines, fuel tank and engine components. If you have fuel leaks repair all leaks prior to starting your installation. If your fuel tank is near your welding area **remove your tank prior to welding.**

Remove all combustible items above the work area such as seats, carpets, padding, etc.

Keep all flammable materials away from the vehicle work area.

2) PREPARING YOUR WORKSTATION

Keep a fire extinguisher close by in the case of fire and make sure you always have a designated "Fire Watch" to assist during the cutting or welding phases.

Abide by all apprenticed welding safety standards and practices.

Always use appropriate welding eye protection, ear protection, and work and fire safety gloves during the installation and within the work area.



WARNING!

If you are unsure on how to perform the installation or how to operate any of the required tools listed above, it is **HIGHLY** advised that you enlist the work of a certified welder/installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**



RUST BUSTER


RB7018L & RB7018R Front Bed Mount 2009-2014 Ford F-150

3) PREPARING FOR YOUR INSTALL

Remove or lift your bed out of the way. Remove your bed mounts bushing.

4) CUT

Cut off the factory front bed mount and any obstructions in the work area.

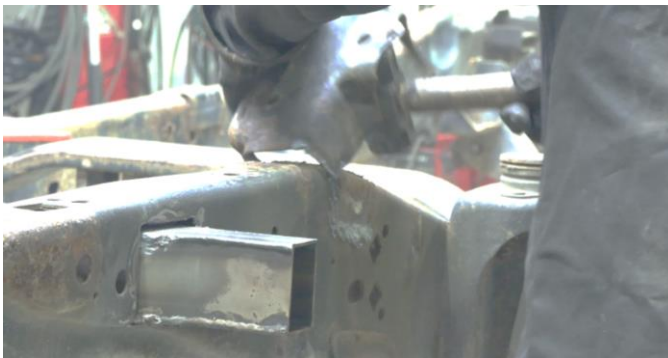

Grind the frame free of rust and debris, revealing bare metal.




Spray the work area with a weld-through primer to help prevent against rust development.

5) WELD

Take your replacement front bed mount and hold it up to the silhouette where your factory bed mount was originally located. You will need to c-clamp your part onto the frame to hold it in place.



After securing your part, take your tape measure and using the part on the opposite side of your vehicle, measure the distance between the top of the frame rail and the top of your part.

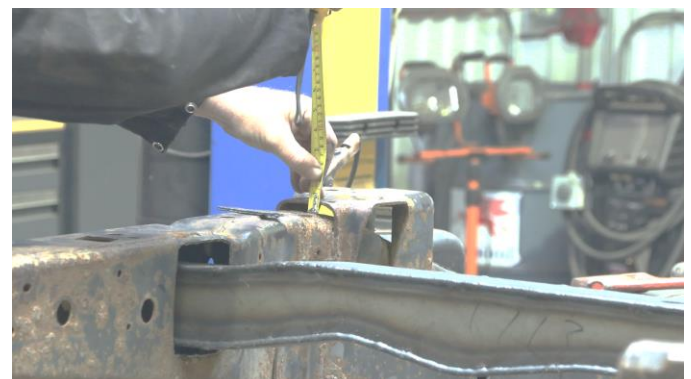



RUST BUSTER

RB7018L & RB7018R Front Bed Mount 2009-2014 Ford F-150

Then, with your measurements, verify the distance is equal on both sides of your frame.



Following proper welding procedures, tack weld your front bed mount onto the frame before welding it on fully. Weld 100% around all edges.



6) **PAINT**

Paint the part with primer or other rust inhibitor to help prevent or reduce the risk of rust formation.

We recommend our Rust Buster Rust Converter & Primer Spray Paint (RB9917).



7) **REINSTALL**

Reinstall your bed mounts bushing and truck bed.