



RUST BUSTER

RB7373

Core Support Mount

1981-1987 Chevy C/K10 – Standard Cab 8 ft. Bed



VIDEO AVAILABLE



REQUIRED TOOLS

Jack Stands or Lift
Paint/Primer
Hand Grinder
Cutting Wheel or Torch
Ear & Eye Protection
Sockets & Ratchet
Fire Extinguisher
Wrench
Hammer

KIT CONTAINS

Core Support Mount
M10 Flanged Hex Screw
M10 Flange Locknut

QTY

1
4
4



RUST BUSTER

RB7373 Core Support Mount 1981-1987 Chevy C/K10 – Standard Cab 8 ft. Bed

1) PREPARING YOUR VEHICLE

Begin by disconnecting your battery prior to starting your installation.

Inspect your vehicle for leaking fuel lines, fuel tank and engine components. If you have fuel leaks repair all leaks prior to starting your installation. If your fuel tank is near your welding area **remove your tank prior to welding.**

Remove all combustible items above the work area such as seats, carpets, padding, etc.

Keep all flammable materials away from the vehicle work area.

2) PREPARING YOUR WORKSTATION

Keep a fire extinguisher close by in the case of fire and make sure you always have a designated “Fire Watch” to assist during the cutting or welding phases.

Abide by all apprenticed welding safety standards and practices.

Always use appropriate welding eye protection, ear protection, and work and fire safety gloves during the installation and within the work area.



WARNING!

If you are unsure on how to perform the installation or how to operate any of the required tools listed above, it is **HIGHLY** advised that you enlist the work of a certified welder/installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**



RUST BUSTER


RB7373 Core Support Mount 1981-1987 Chevy C/K10 – Standard Cab 8 ft. Bed

3) PREPARING FOR YOUR INSTALL

Lift up your vehicle. Remove the core support mounts bolt and bushing.

4) CUT

Remove the four rivets retaining the factory core support mount.

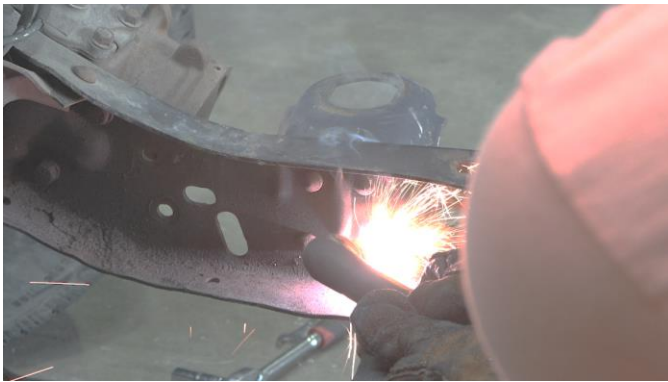

Grind the frame free of rust and debris, revealing bare metal.

5) INSTALL

Hold your replacement core support mount up to the frame and insert the four bolts in to hold it in place. With a 14mm socket and 15mm wrench, screw in the four included bolts and nuts.



6) PAINT

Paint the part with primer or other rust inhibitor to help prevent or reduce the risk of rust formation.

We recommend our Rust Buster Rust Converter & Primer Spray Paint (RB9917).



7) REINSTALL

Reinstall your core support mounts bolt and bushing.